



SETTING STAND FOR BT30, BT40, BT50, SK40,
HSK A32, HSK A40, HSK A50, HSK A63, HSK A100